

7.2.3.10.m Replace iZi Modular harness

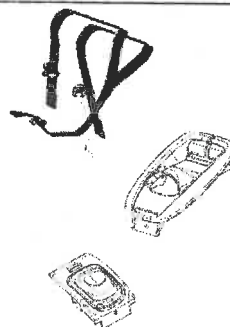
BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 1 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

What you will need:

Parts (supplied by HTS BeSafe):

- iZi Modular i-Size harness system, itemnumber Q2002680
- iZi Modular Central adjuster cover, itemnumber L2001235
- iZi Modular Central adjuster button, itemnumber L2001237



Tools:

Screw driver
with Torx bit size 20

Allen key no. 3

Marker

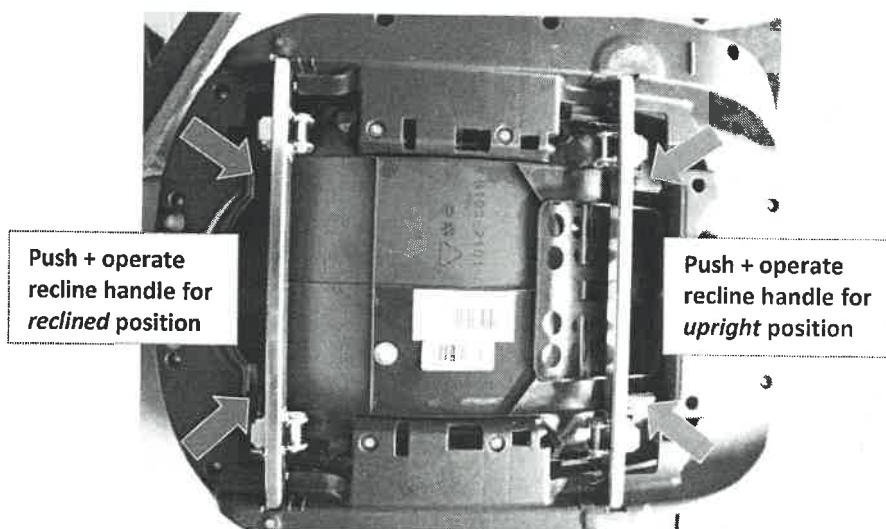
Pair of pliers



General remark:

During this service you will need to place the seat in *reclined* or *upright* position. Use instruction below for adjusting seat angle. Use pictures to the right for reference.

Bottom view:



Push the indicated recline blocks and adjust the seat angle at the same time.



Reclined position



Normal position





Upright position

7.2.3.10.m Replace iZi Modular harness

BeSafe®



Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 2 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

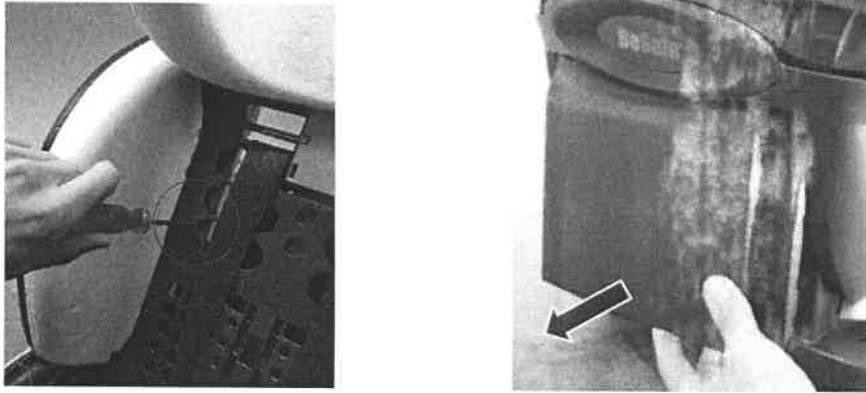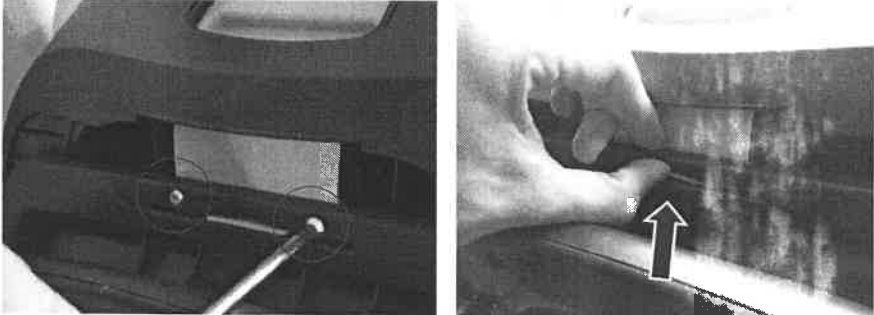No.	Action	Remark
A	Removal of old harness system	
A1	Remove fabric  Remove fabric, ... foam and bottom EPS, ... and headrest fabric.	
A2	Remove rear cover <i>Put the seat in upright position. Refer to page 1.</i>  Place headrest in highest position and remove both screws (left and right) Lift rear cover from rear side	
A3	Remove locking bracket <i>Put the seat in reclined position. Refer to page 1.</i>  Unscrew the recline handle. Unclip the recline handle.	

7.2.3.10.m Replace iZi Modular harness

BeSafe®


Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 3 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

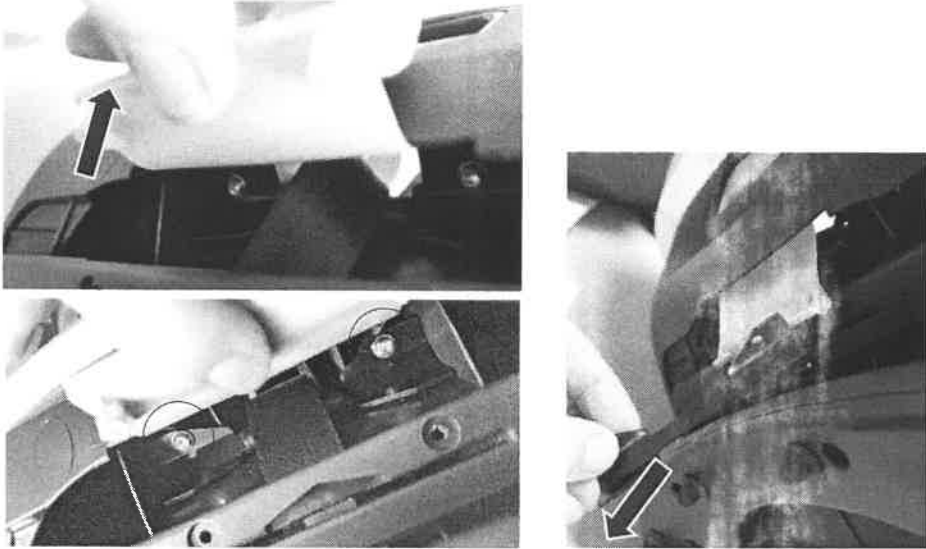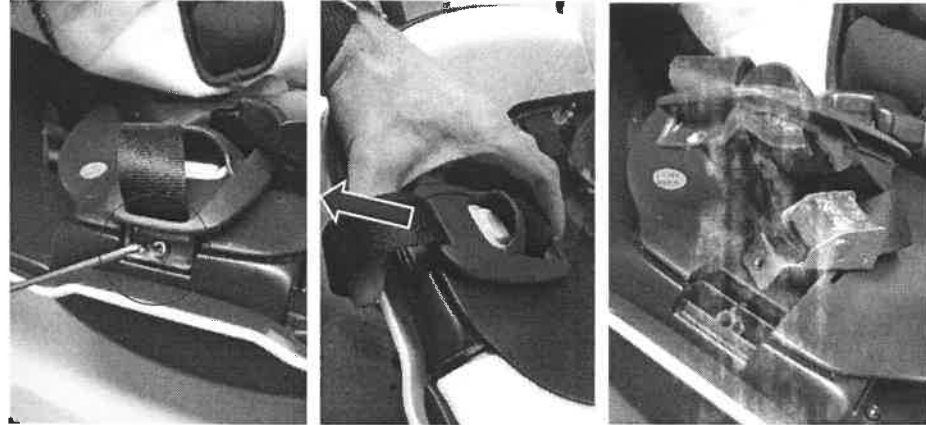No.	Action	Remark
	 Bend recline handle gently away and unscrew two screws of the bracket. Remove the bracket and put aside.	
A4	Remove central adjuster cover  Unscrew bolt. Lift central adjuster cover. Central adjuster cover Removed.	

7.2.3.10.m Replace iZi Modular harness

BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 4 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZI Modular harness rev03 2017 05 10.docx				

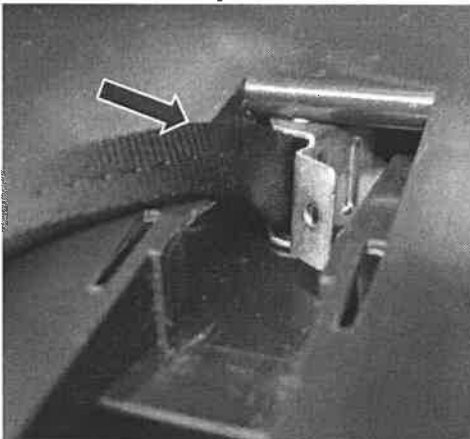No.	Action	Remark
A5	Remove belt from central adjuster cover  Pull belt through hole in central adjuster cover (some force required!), put central adjuster cover and crotch strap aside.	
A6	Remove central adjuster lever   Push central adjuster through seat shell. Pull adjuster from the bottom side.	

7.2.3.10.m Replace iZi Modular harness


BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 5 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				


A7 Remove recline brackets



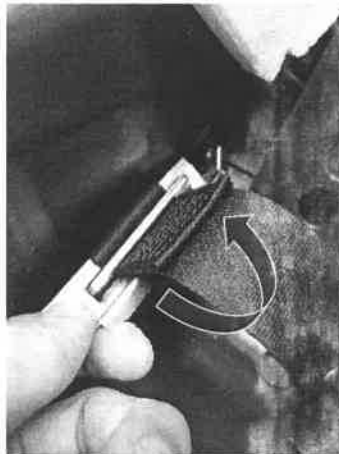
Unscrew screws (left and right).



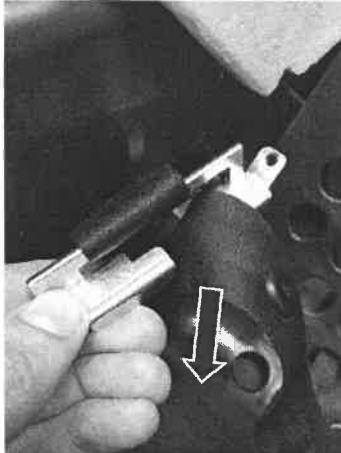
Tilt brackets and move upward (left and right).



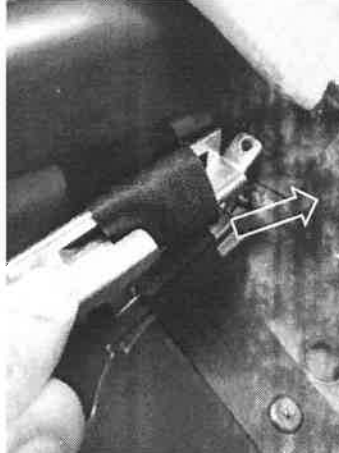
Remove belt from bracket.
(left and right)



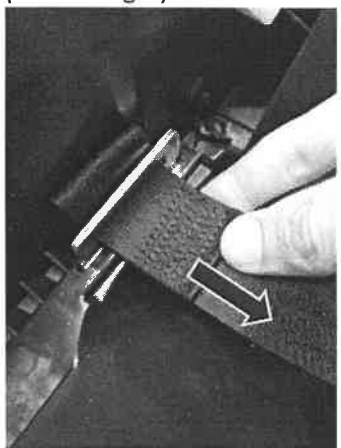Remove brackets from belt
(left and right) and put aside.



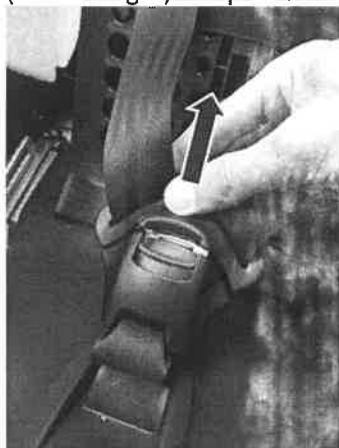Remove belt from main bracket
(left and right).






Release harness buckle.



7.2.3.10.m Replace iZi Modular harness

BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 6 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZI Modular harness rev03 2017 05 10.docx				

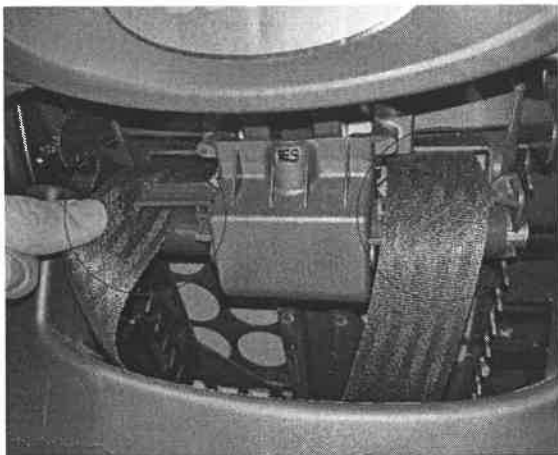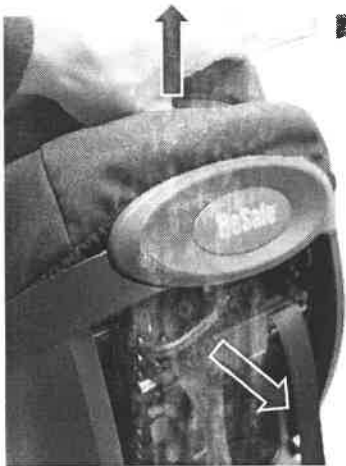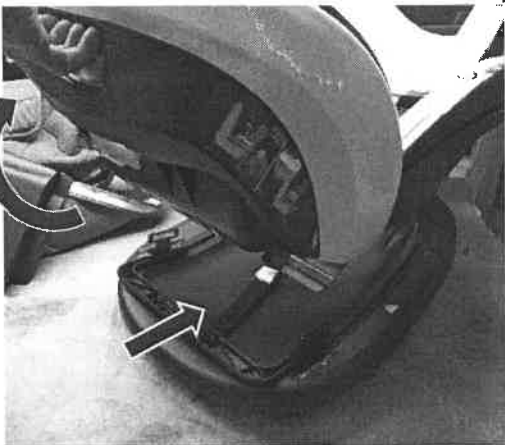No.	Action	Remark
A8	Remove harness  Remove the harness from the harness guiders.  While pulling the height adjuster, pull harness through seat shell.  Lift the seat from the seat base and remove the harness.	
A9	Throw away used parts  Mark and throw away old parts: - Central adjuster button - Central adjuster cover - Crotch strap - Harness system	<i>Required: marker</i> 

7.2.3.10.m Replace iZi Modular harness

BeSafe®





Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 7 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

No.	Action	Remark
B	Assembly of new harness system	
B1	Assemble harness Insert central adjuster from rear side, pull underneath seat towards front Push harness through hole in seat shell. Pull harness through seat shell. Warning: No twisting of the belt! Warning: No belt below recline handle!	<i>Required: new harness system.</i> <i>No twisted belt!</i>

7.2.3.10.m Replace iZi Modular harness

BeSafe®




Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 8 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

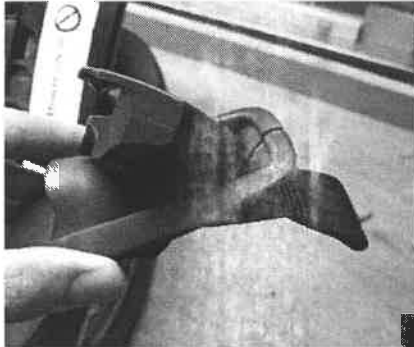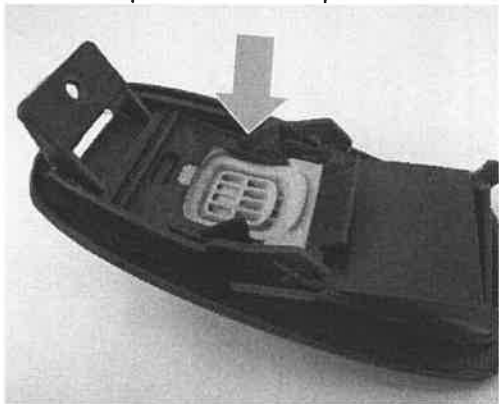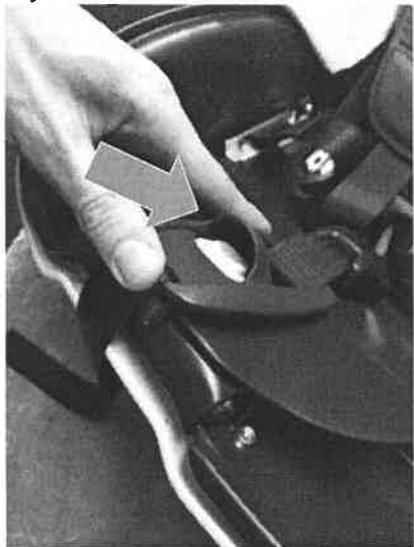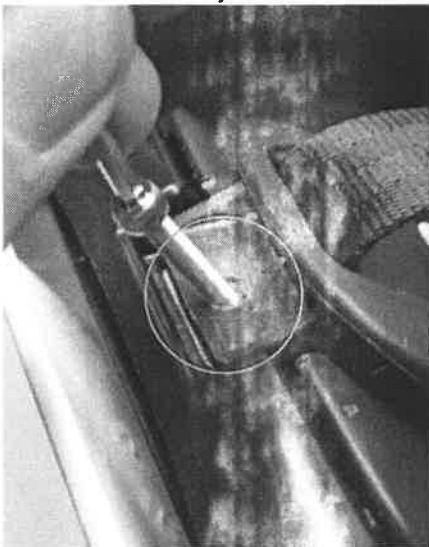No.	Action	Remark
B2	Assemble central adjuster button and cover   Pull strap through central adjuster cover. Use pliers if necessary.   Insert central adjuster button in central adjuster cover.   Place on seat shell and push to fix. and central adjuster cover. Fasten with hex bolt.	<i>Required: new central adjuster cover and new buckle.</i>  <i>Required: new central adjuster button</i>

7.2.3.10.m Replace iZi Modular harness

BeSafe®


Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 9 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

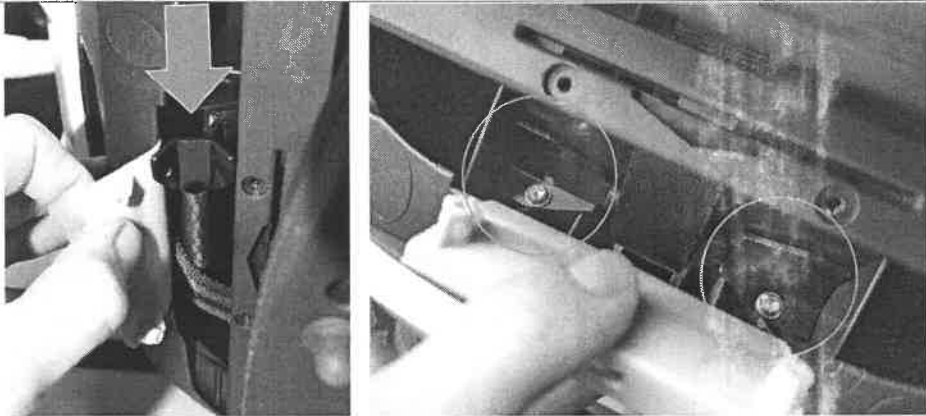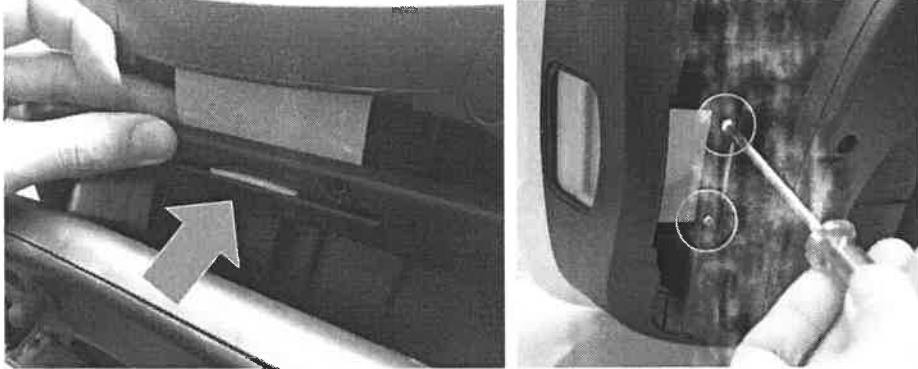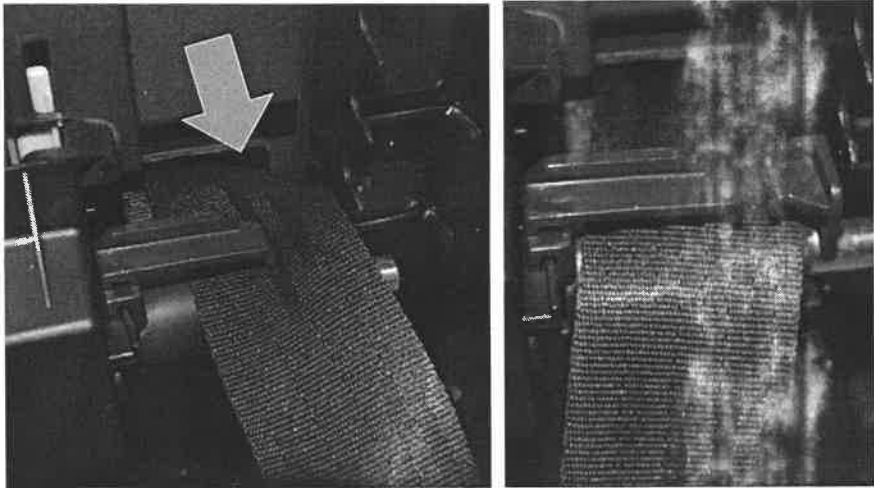No.	Action	Remark
	 Slide bracket in like indicated and fix with 2 screws. Check the position of the bracket and the alignment of the holes!	
B3	Assemble recline frame  Snap the recline handle into place. Fix both screws.	
B4	Assemble harness  Pull belt hooks through seat shell and belt through sleeves.	


7.2.3.10.m Replace iZi Modular harness

BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 10 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

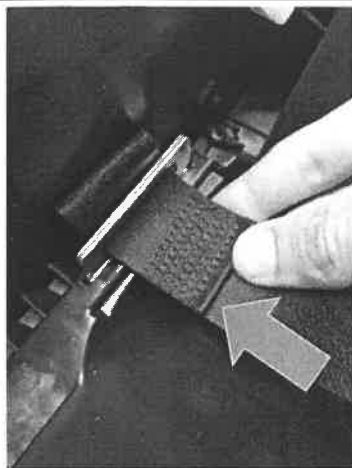

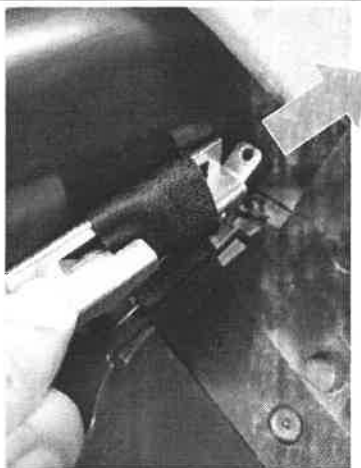
Feed left belt through left reclining main bracket with folded side up. Make sure belt is not twisted. Repeat on right side of seat.



Insert bracket through belt loop, like indicated (left and right).



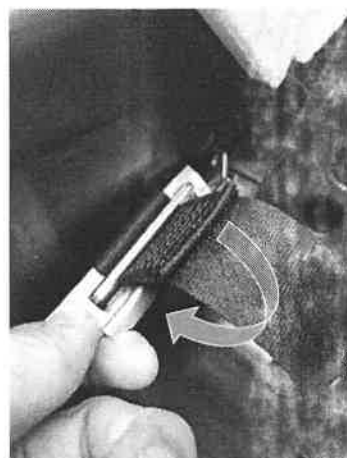
Feed belt through bracket again, like indicated (left and right).



Place bracket over reclining main bracket and twist into position (left and right).



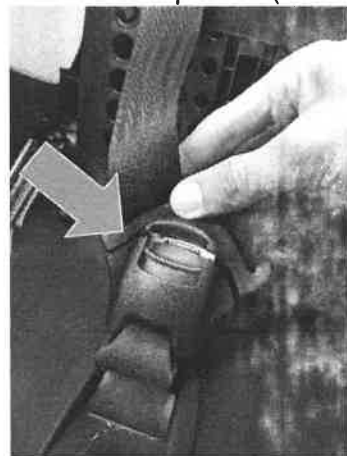Fasten bracket with screw (left and right).





Close the harness and check for correct installation.



7.2.3.10.m Replace iZi Modular harness

BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 11 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

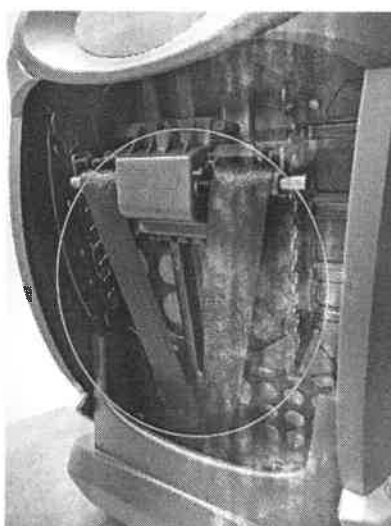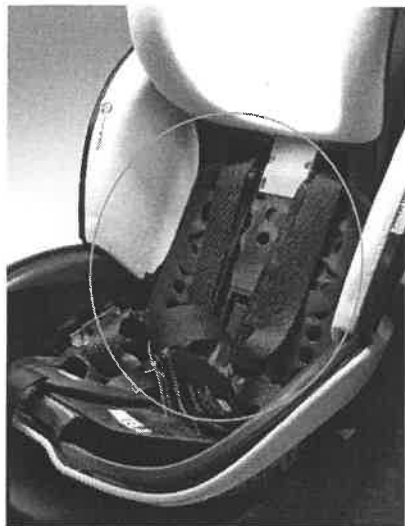

Check that the harness is not twisted!

B5 Assemble rear cover

Put the seat in upright position. Refer to page 1.



Assemble rear cover.



Fasten with two screws (left and right).



7.2.3.10.m Replace iZi Modular harness

BeSafe®

Project: B103	Rev.: 03	Date: 2017-06-07	Pages: 12 of 12	Saved: 07.06.2017	Sign:
Done by: HW	7.2.3.10.m Service instruction to replace iZi Modular harness rev03 2017 05 10.docx				

No.	Action	Remark
B6	Place EPS parts, foam and fabric. <i>Put the seat in normal position. Refer to page 1.</i> Reinstall headrest fabric and shoulder polsters, EPS parts, foam and main fabric. Close the harness.	
C1	Safety check! Press the button and adjust the harness. Release the button and pull slow. The button must directly return in the original position. There is no slip of the harness allowed after releasing the button.	